



USER MANUAL

**RIGID SHANK CULTIVATOR
MODEL NO. BRC-S1 AND BRC-S2**

Brohawk Rigid Shank Cultivator comes with 5 Shank (1 Row) , 9 Shank (2 row). On these Rigid Cultivator you can install Fertilizer & seed drill attachments. The rows are adjustable to choose the right working space. The shanks are not for tillage purpose as they are not long enough and can be broken on hard surface. This Rigid Shank cultivator does not comes with points but you can fix any kind of points according to your requirement. Mostly used points are 7" x 10" and 2 ½" x 6". Covington planter & fertilizer spreader can be attached with this cultivator.

SAFETY INSTRUCTIONS:

The Brohawk Rigid Shank Cultivator is intended for normal agricultural use and may be operated by any person with a general knowledge of using agricultural machinery. On these Rigid Cultivator you can install Fertilizer & seed drill attachments.

Before starting to use the cultivator, familiarize yourself with the machine, its operation and the instruction Manual. The cultivator must not be operated until you have familiarized yourself with its operating and safety instructions and ensured that you completely understand them.

Follow all warning and operational instructions affixed to the cultivator. These will help you avoid accidents during the work.

Beware of getting squashed between moving parts of the machine while connecting the cultivator to the tractor or when lifting or lowering it.

It is prohibited to stay near the cultivator and in particular its side-block, while the cultivator is connected to the tractor.

During operation make sure no one is near the operating area.

Staying on the top of machine during road transportation or cultivation is strictly prohibited.

Before starting the work, make sure that both side-blocks have lowered to their extreme positions.

Never use the cultivator if it is broken as a broken structure can easily collapse and cause a risk of injury.

Raising or lowering the side-blocks of the cultivator is only allowed when the machine is standing in position.


While driving the machine on public roads, follow all regulations of the Road Traffic Act and, before setting out, make sure that all items of equipment required such as reflectors, warning triangles and lights (optional), are properly in place and operational.

Do not allow anyone to use the cultivator without familiarizing themselves with its safety and operating instructions and ensuring that these instructions have been correctly understood.

Before commencing any maintenance, cleaning, lubrication, installation or adjustment work, always make sure that the power take-off and the hydraulics have been switched off and that the engine has been stopped. Remove the ignition key to prevent the tractor or the implement from setting out inadvertently.

During maintenance work, the side-blocks must be in their lowest position and the machine must be firmly supported on an even surface.

BROHAWK RIGID SHANK CULTIVATOR

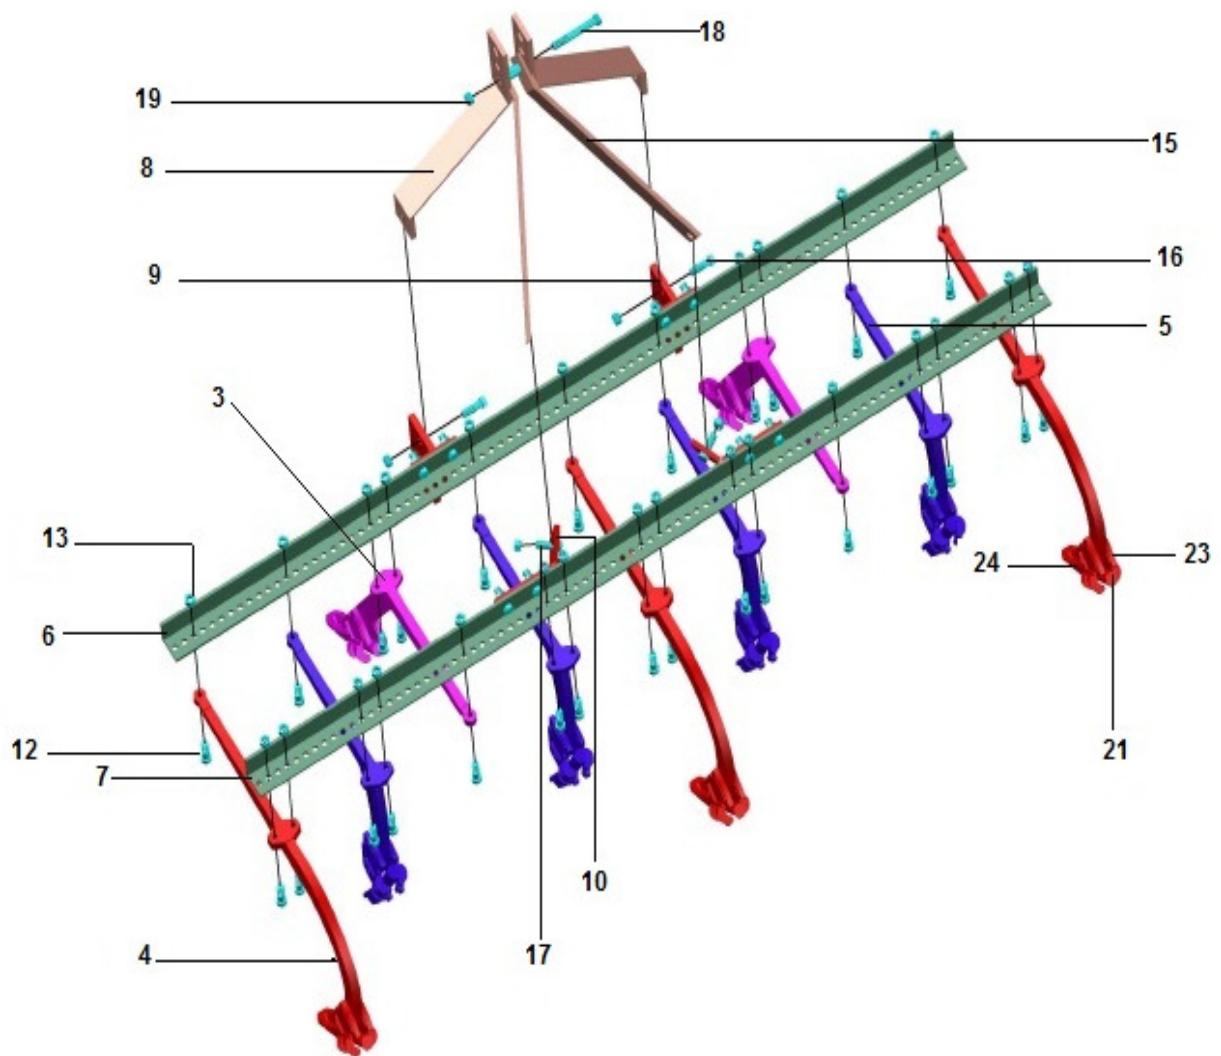

RIGID SHANK CULTIVATOR

S.NO	CODE	DESCRIPTION	BRC-S1	BRC-S2
1	BRCS1	1 ROW RIGID SHANK CULTIVATOR	5 SHANKS	-
2	BRCS2	2 ROW RIGID SHANK CULTIVATOR	-	9 SHANKS
3	BRCS1-MSA	MEDIUM SHANK ASSEMBLY	1. Pcs	2. Pcs
4	BRCS1-LSA	LONG SHANK ASSEMBLY	2. Pcs	3. Pcs
5	BRCS1-SSA	SHORT SHANK ASSEMBLY	2. Pcs	4. Pcs
6	BRCS1-C001	FRONT FRAME	ANGLE 65 x 8 mm	ANGLE 65 x 8 mm
7	BRCS2-C001	REAR FRAME	ANGLE 65 x 8 mm	ANGLE 65 x 8 mm
8	BRCC002	FRONT LINKAGE	FLAT 75 X 12	FLAT 75 X 12
9	BRCC003	FRONT BRACKET	FLAT 125 x 12 mm & FLAT 100 X 16 MM	FLAT 125 x 12 mm & FLAT 100 X 16 MM
10	BRCC004	REAR BRACKET	FLAT 50 x 16 mm	FLAT 50 x 16 mm
11	BRCC005	CARRIAGE BOLT 7/16" X 3" H.T (SHARP CHOKSI)	15. Pcs	27. Pcs
12	BRCC006	BOLT 7/16" X 2" F.T	15. Pcs	27. Pcs
13	BRCC007	NUT 7/16"	30. Pcs	54. Pcs
14	BRCC008	WASHER 7/16"	25. Pcs	45. Pcs
15	BRCC009	REAR LINKAGE	FLAT 50 x 12 mm	FLAT 50 x 12 mm
16	BRCC010	BOLT 5/8 X 2" H.T	8. Pcs	8. Pcs
17	BRCC011	BOLT 5/8 X 1.5" F.T	4. Pcs	4. Pcs
18	BRCC012	BOLT 5/8 X 4.5" H.T	1. Pcs	1. Pcs
19	BRCC013	NUT 5/8"	13. Pcs	13. Pcs
20	BRCC014	WASHER 5/8"	13. Pcs	13. Pcs
21	BRCC015	STEM	5. Pcs	9. Pcs
22	BRCC016	SPECIAL WASHER	10. Pcs	18. Pcs
23	BRCC017	RIGHT CUFF	5. Pcs	9. Pcs
24	BRCC018	LEFT CUFF	5. Pcs	9. Pcs
25	BRCC019	MEDIUM SHANK CASTING	-	-
26	BRCC020	SHORT SHANK CASTING	-	-
27	BRCC021	LONG SHANK CASTING	-	-
28	22690-05	TILLER PIN 22"MM	2. Pcs	2. Pcs

ATTACHING THE CULTIVATOR TO THE TRACTOR

Attach the planter & the fertilizer spreader with the rigid cultivator as per the instructions of the supplier company.

1. Place the cultivator duly levelled on the flat piece of the land.
2. Reverse the tractor to the cultivator (Do not drag the cultivator up the tractor)
3. Attach the left arm of the tractor to the cultivator first.
4. Attach the central arm to the cultivator. To attach, turn the screws on both side to an equal length. If the arm is too short or too long, turn the screw to adjust both at the same time until aligned with the hole on the central arm.
5. Attach the lower right arm; Turn the screw until the mounting pin is at the same level as the hole on the tractor arm. If the gap between the hole and the mounting pin is too close or too distant, turn the control arm in or pull it away to an appropriate distance. You may have to adjust both height and distance at the same time. When the hole at the tractor arm and mounting pin are even, insert the pin in the hole and lock it with the lynch pin.
6. After attaching the cultivator, lift it and adjust the control arm parallel to the ground. When you look from both rear and sideways the points should all be touching the ground uniformly.

OPERATION CARE & MAINTANANCE OF CULTIVATORS

All the teeth of the tines should be set at equal depth. To do this, place the cultivator on the level ground and see that all the teeth touch the ground. If they are not touching, the shank by shank loosing & fastening the bolts.

Before commencing work with Cultivator, check it for loose bolts and nuts and fasten them properly. After having taken all these precautions, run the cultivator for one hour and then inspect it once more for any loose parts.

Never turn or reverse your tractor while Cultivator is ploughed deep in field. This will twist the assemblies out of alignment and damage them extensively.

Reverse or replace the shovel point when worn out. Delay may result in wearing out of the tines which will result into expensive repairing/replacements. Avoid use of extra wide shovels as they do not improve tillage quality but only put extra load on the tractor and also result into extra fuel consumption.

Before storage, thoroughly wash down and clean all the dirt from the implement or rust will form under a layer of dust. Also put a thin layer of used oil or grease.