



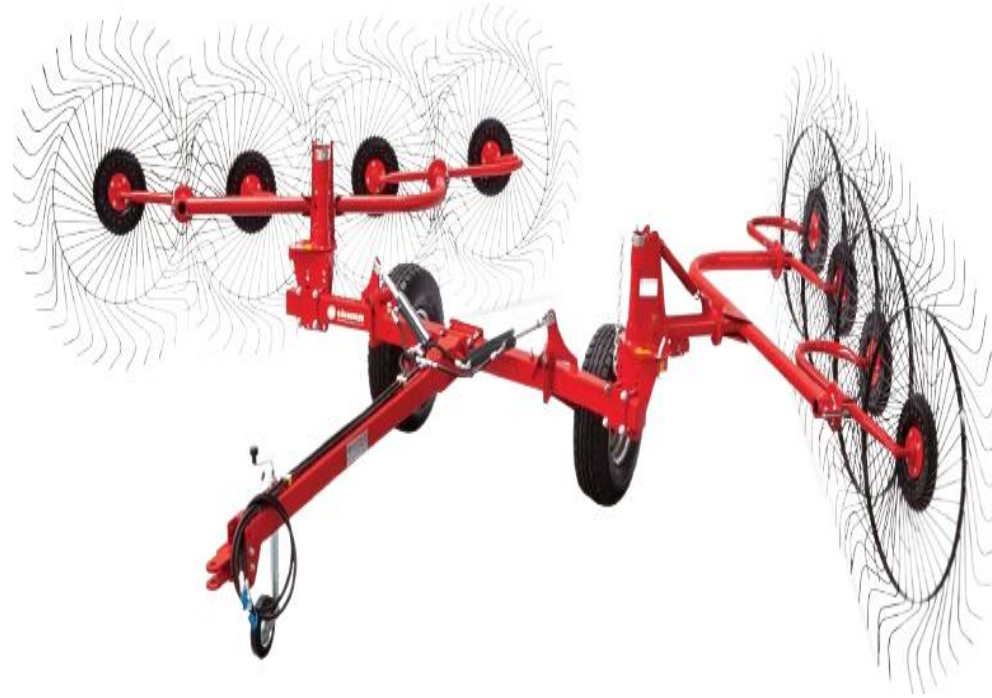

**Kicker Wheel Manual User**

## 10 Wheel Carted Hay Rake

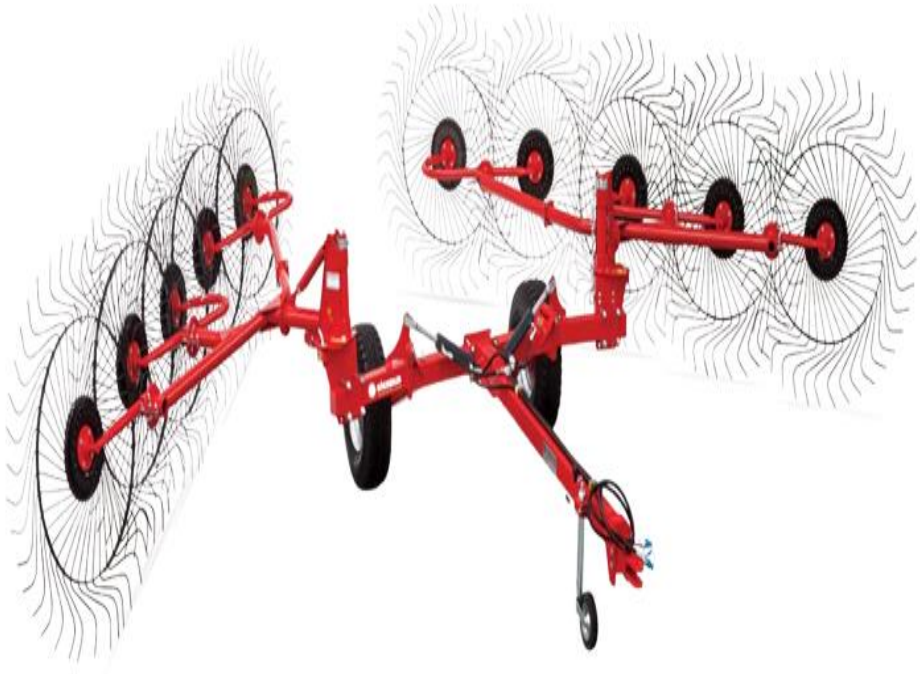


## 8 Wheel Carted Hay Rake

# Kicker Wheel




# Kicker Wheel

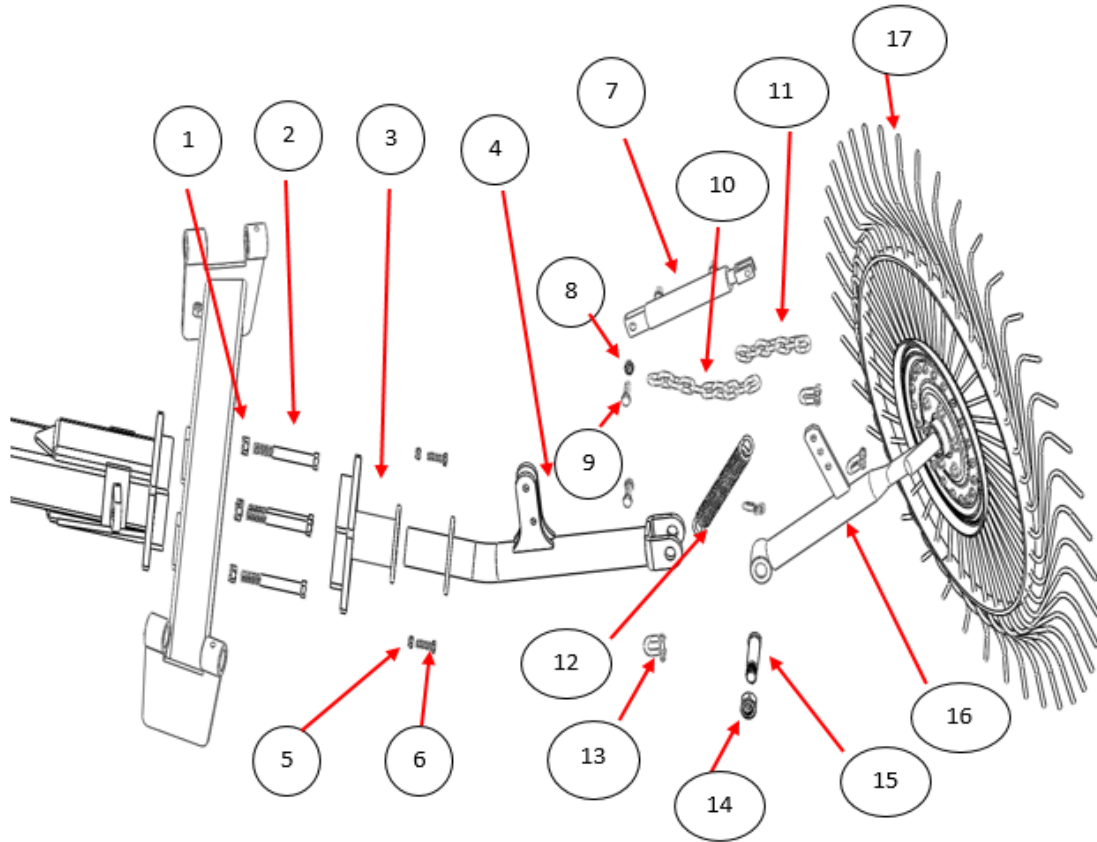

No	Pcs	Spare Part
1	4	M16 Nut
2	4	M16x150 Hexagon Head Bolt
3	1	Flanged Interconnection
4	1	Inter-connecting Arm Long
5	2	M10 Nyloc Nut
6	2	M12x40 Hexagon Head Bolt
7	1	Kicker Hydraulic Cylinder
8	2	M12x1,5 Nut
9	2	M12x40 Bolt
10	1	Spring Fixing Chain (10 pcs)
11	1	Hydraulic Cylinder Fixing Chain (7 pcs)
12	1	Spring
13	4	Chain Lock
14	1	M23x1,5 Nyloc Nut
15	1	Axle Arm Fixing Pin
16	1	Kicker Axle Arm
17	1	Small Wheel (Assembly)

# Hydraulic Connecting System

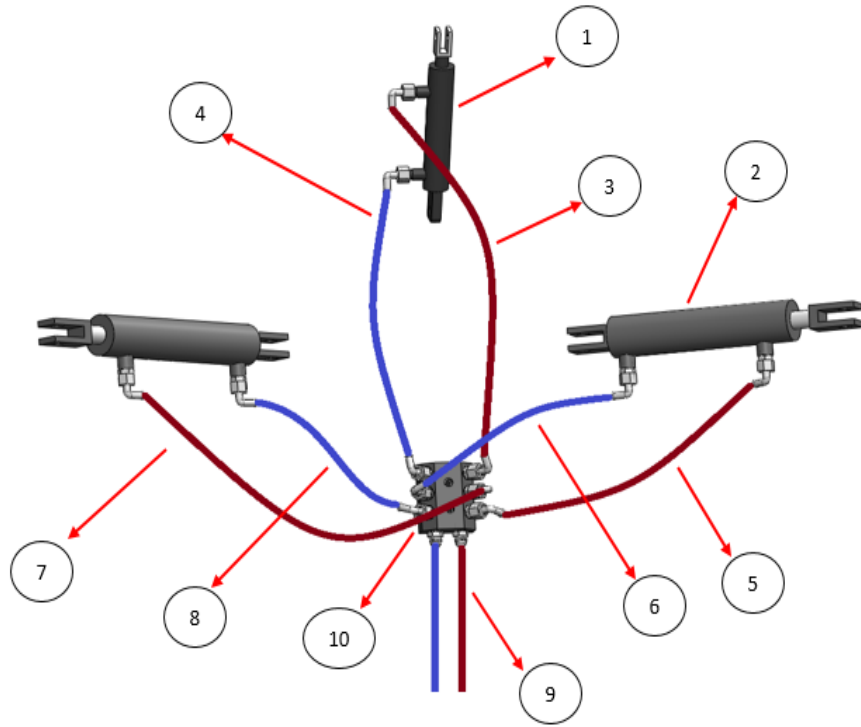

Hydraulic Hoses; Its installation on the hydraulic distributor and hydraulic cylinders must be mounted as shown in the figure.

No	Pcs	Spare Part
1	1	Kicker Hydraulic Cylinder
2	2	Large Hydraulic Cylinder
3	1	Kicker Hydraulic Return Hose 3/8"
4	1	Kicker Hydraulic Inlet Hose 3/8"
5	1	Hydraulic Return Hose 3/8" Right Arm
6	1	Hydraulic Inlet Hose 3/8" Right Arm
7	1	Return Hose 3/8" Left Arm
8	1	Hydraulic Inlet Hose 3/8" Left Arm
9	2	Main Hydraulic Hose 3/8"
10	1	Hydraulic distributor 2-6

