



# Outdoor Cooking Stand with 32" Discada Owner's Guide




M134769

## 1. Contents

Check the contents of the box to be sure all parts are present prior to assembly. If parts are damaged or missing, call 833-926-6537.

Contents		
Item	Description	Qty.
1	Top Ring	1
2	Stainless Steel Grate	1
3	Support Legs	3
4	Rod Holder Bracket	2
5	Rod	1
6	Support Chains w/Clip	3
7	32" Cast Iron Discada with Handles	1
8	Hardware (Bolts & Nuts)	10
9	Lifting Hooks	2

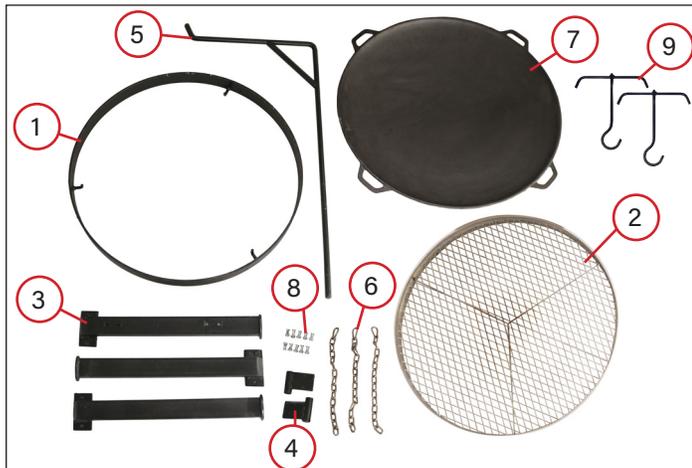


## 2. Assembly Instructions

- 2.1 Attach and tighten three legs to the Top Ring using flat head bolt and nut.



- 2.2 Attached and tighten rod holder brackets to support leg

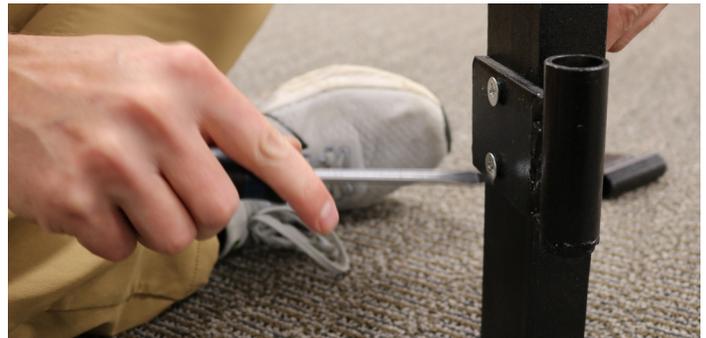

### NOTICE

Bracket with closed end will need to be attached to the bottom of the support leg.

## 3. Various Cooking Configurations

### 3.1 Top Cooking Grate Open Fire Method

- a. Place Stainless Steel Grate on the top support hooks with open bottom

### CAUTION

ALWAYS Allow Grate to cool off before adjusting. Use Lifting hooks to remove HOT grate.



### 3.2 32" Discada with Propane Banjo Burner (Sold Separately)

- Secure the support chains to the steel grate using the clips, and then hook the other end of the chain onto the top ring.
- Adjust the chain length to achieve the desired height for the grate and to ensure the burner is level.

**CAUTION** Cast Iron Discada gets hot when in use. Use well-insulated oven mitts before moving the discada.



**Note:** Carolina Cooker® Banjo Burner and Stand #64482A - Sold Separately

### 3.3 32" Cast Iron Discada Open Fire Method

- Place Cast Iron Discada on top ring, with open bottom



### 3.4 Dutch Oven Open Fire Method

- Place Rod in the Rod Holder Bracket
- Secure Dutch Oven (Sold Separately) handle on top Rod, with open bottom



**Note:** Carolina Cooker® 5 Qt Cast Iron Dutch Oven #123882 - Sold Separately

## 4. General Safety

Failure to follow these safety instructions and warnings could result in a fire or an explosion, which could cause property damage, personal injury, or death.

### WARNING



Read and follow all instructions and warnings in this Owner's Guide, on the cylinder, and on the supply hose safety tags before connecting the cylinder to the appliance.



Do not allow anyone to conduct activities around this appliance during or following its use until the appliance and the cooking liquid has cooled. The appliance is hot during operation and remains hot for a long period of time following its use.

#### 4.1 Prior to Cooking



Do NOT leave the appliance unattended while the burner is lit or while heating oil, grease, water, or when cooking food.



Carefully monitor the appliance, especially when the cooking oil, grease, or water is above 100° F (38° C).



This appliance gets dangerously hot while in use. Use well-insulated pot holders or oven mitts for protection from hot surfaces or splatter from cooking liquids. Safety glasses or goggles are also recommended to protect from oil splatter.

#### 4.2 While Cooking



Never leave hot cooking liquids unattended.



Carefully remove food from the appliance to prevent burns from hot cooking liquids.



Do not place an empty cooking container on a lit burner. Empty aluminum cooking containers will melt if placed over lit burner.



Do NOT move the appliance when in use.



Avoid bumping of or impact with the appliance to prevent contact with hot surfaces, spillage or splashing of hot cooking liquids.

## 5. Warranty

Carolina Cooker® warrants, to the original purchaser, the appliance to be free of defects in material and workmanship for a period of one year from date of purchase.

### NOTICE

Paint finish may burn off under normal use and, therefore, it carries no warranty.

Distributed by Direct Distributors, Inc.  
Carolina Cooker® | P.O. Box 799 | Garner, NC 27529  
Orders: 833-926-6537 | Inquiries: 844-478-4334  
Web: [www.CarolinaCooker.com](http://www.CarolinaCooker.com)

© Direct Distributors Inc. 2025 | No portion of this material may be reproduced or modified without the express written agreement of Direct Distributors Inc.  
Direct Distributors Inc.'s family of stores is Agri Supply®. Carolina Cooker® is a brand of Agri Supply®.

Model M134769  
May 2025

Scan the QR Code for  
a digital Owner's Guide



Carolina Cooker®  
844-478-4334