



Attach the 4 legs to corners with bolts and nuts provided

Attach air adjuster bolt and spring

Attach burner controls with bolts and nuts provided

Attach burners with bolts and nuts provided

Assembly and Operating Instructions for Single, Double and Triple Burner

Attach regulator and hose (not supplied) to the flare fitting on end of control valves. Make sure connections do not leak. Open tank valve, and place lit match by burner, open control valve until lit. Adjust the air bolt with spring as needed for flame to reach optimum performance.

Do not use unit on any structure that will catch fire and burn. Keep cylinder a minimum of 18' away from unit. Turn unit off after each use, for your safety never leave unattended, keep children and pets away at all times.