


ASC 70096

REVISED 3/23/17

Eagle Air Compressor part breakdown - IHVP1520L

Item	Description	Part	Item	Description	Part
1	Head Bolt M6x55	IH30551	43	Bolt M5*15	IH1727
2	Spring washer 6	IH1211	44	Safety valve	IH1090
3	Cylinder head	IH1343	45	Tank	20VEPORT-IH
4	Exhaust elbow	IH1086A	45a	Bolt	IH1800
5	Gasket	IH1051	46	Check valve	IH2026B
6	Valve assembly		47	Drain valve	IH1850
7	Gasket	IH1053	48	Exhaust nut	IH1174
8	Cylinder	IH3010	49	Exhaust pipe w/fittings	IH1174
9	Piston	IH3011	50	Pressure switch	21UCBDB-CH
10	Piston air ring	IH3018*	51	Pressure gauge	IH1177
11	Piston oil ring	IH3018*	52	Pressure gauge	IH1177
12	Piston pin clip	IH1420	53	Plug	IH1360
13	Piston pin	IH1534	54	Regulator	R46-200-RNLA
14	Connecting rod	IH3035	55	Quick connect	10TT-8
15	Gasket	IH1225	56	Connector	IH0003
16	Bolt M8*25	IH2035	57	Bolt	IH1045
17	Spring washer 8	IH1212	58	Nut	IH1045A
18	Crankshaft	IH1068A	59	Gasket	IH1045B
19	Bolt M8*22-LH	IH1802	60	Handle grip	IH1528
20	Crank case gasket	IH2019	61	Power cord	IH1841
21	Crank case cover	IH2021	62	Terminal (Y)	
21a	Bolt M6*10	IH2207	62a	Terminal (O)	
22	Seal	IH1591	63	Tube nut	IH1310
23	Oil sight glass	IH1519	64	Unloader Tube w/fittings	IH1310
24	Bolt M6*18	IH0621	65	Cushion foot	IH1058
25	Breather	IH1071	66	Bolt	IH1501
26	Crank case	IH2020	67	Wheel 8"	IH3021
27	Oil seal	IH0530	68	Bolt	IH3023
28	Bearing	IH0140	69	Nut	IH3026
29	Rotator	IH1919	70	Air filter	IH1072
30	Bearing	IH0150	71	Overload protector (15A)	IH2000
31	Stator	IH1918A	6A	Valve Plate	IH1064
32	Spring washer wave	IH2209	6B	Reed valve	IH1052
33	Rear cap	IH1046	6C	Middle Vlv Gasket	IH1049
34	Spring washer 5	IH2210			
35	Bolt M5	IH1048			
36	Fan	IH1044			
37	Circlips	IH1101			
38	Capacitor	IH2250			
39	Washer 3	IH1039			
40	Spring washer 3	IH1040			
41	Bolt M3*6	IH1041			
42	Shroud	IH2024			

IRON HORSE

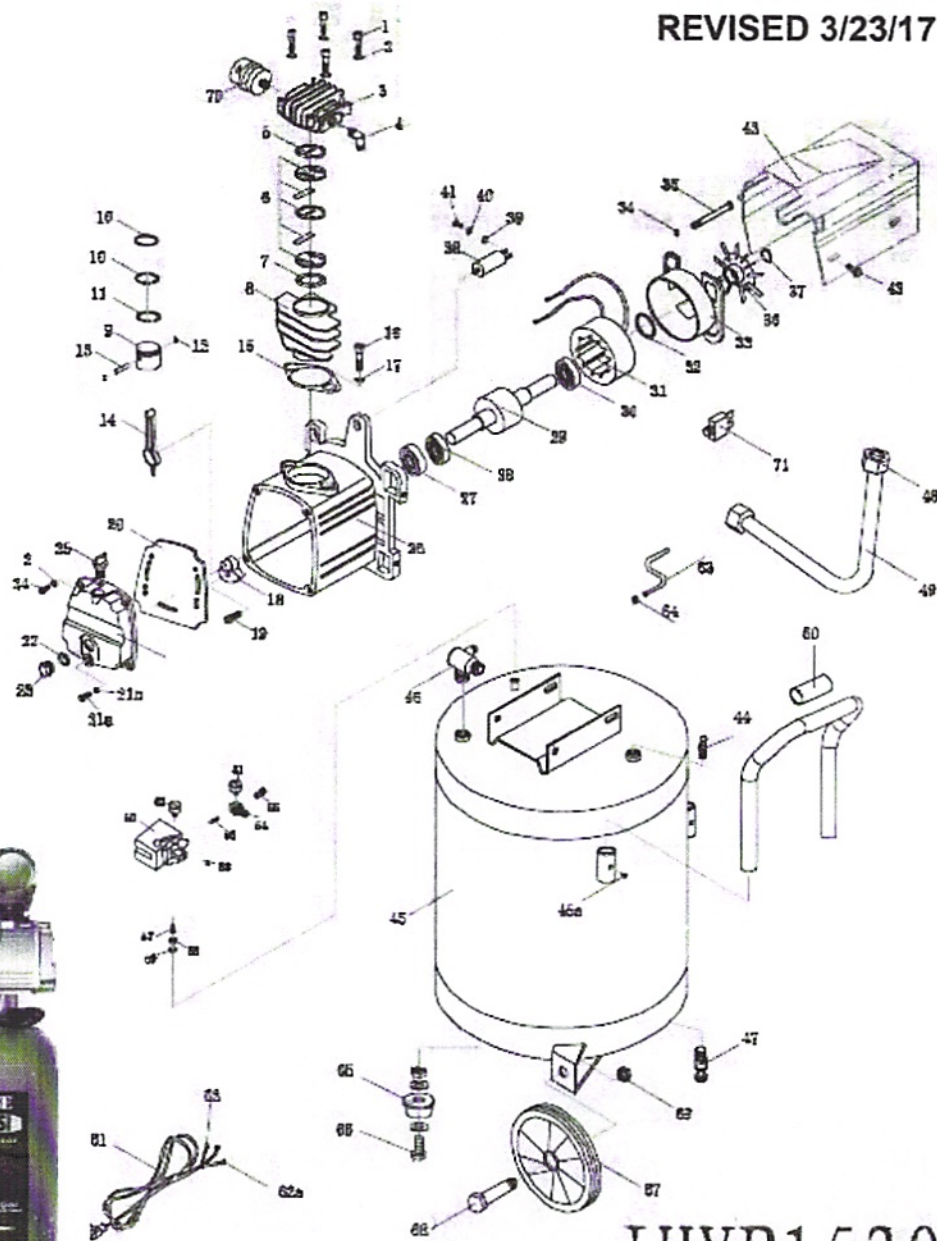

IHVP1520L

Call 1-800-551-2406 for the Customer Service Department.