



LATERAL CONVEYOR

Does not include spreader

All the P, PL and PLS models can be equipped with lateral conveyor. The lateral conveyor is used to convey fertilizer stream to one or two sides and it is also suitable to fertilize orchards or vineyards. It is possible to change the fertilizer stream angle limiting it from 1 metre to 4 metres and this can allow the spread under the trees properly.



LIMITER #71271

Does not include spreader

Limiters can be mounted on all P, PL, PLS and also PTP models. We have two kinds of them: a standard and a professional one. They differ by the way you can change the adjustment in the spreading of salt or fertilizer. A good performance and spreading can be achieved from 2 metres (minimum) to 5 metres (maximum) from the centre of the machine.