



ASC 785-11

IRON HORSE

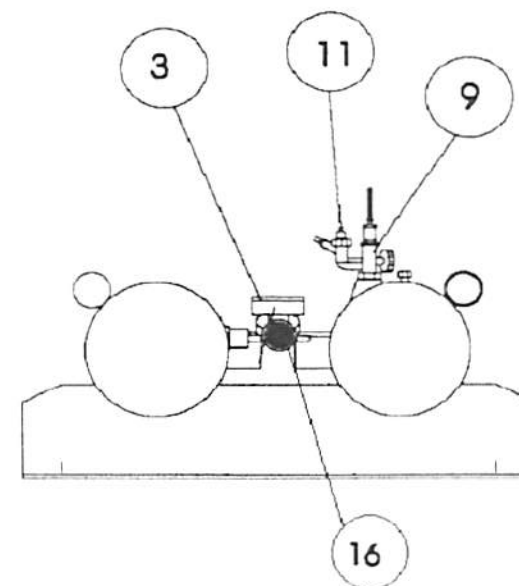

Iron Horse Air Compressor part breakdown - IHTT60G		
Item	Description	IHTT60G
1	Compressor w/ Flywheel	CC2065
2	Discharge Tube w/ Fittings	TU-25-AL
3	Pressure Gauge	PG200-2.5SI1/4
4	Air Receiver	10TT41X5-IH
5	Drain Cock	DC1/4
6	V-Belt	A49
7	Belt Guard	TT-GUARD
8	Engine - Robin	EX170-0230T
9	Pilot Unloader w/ Check Valve	LMV100F
10	Pulley - Engine	MA38X3/4
11	Safety Valve	PSV1/4-150
12	Engine Control w/ Cable	TCP-48
13	Handle Grip	TT-GRIP
14	Vibration Damper	TT-FOOT
15	Pneumatic Wheel	TT-WHEEL
	Axle	WA1001
16	Ball Valve	BV1/4MF

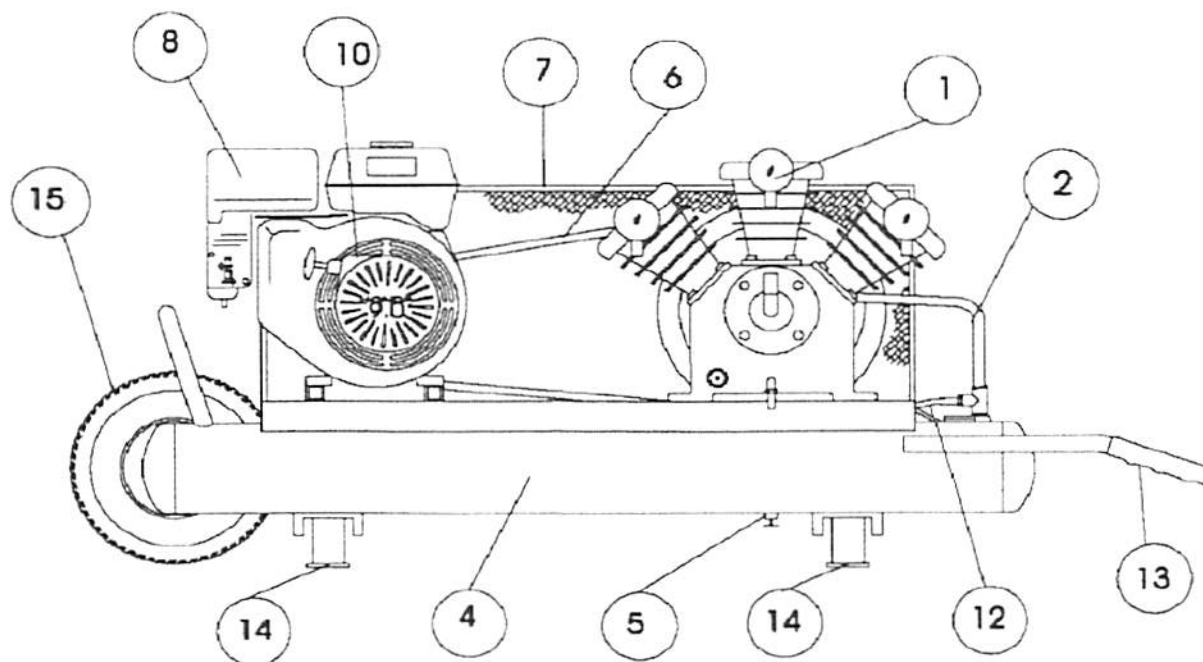


IHTT60G

Call 1-800-551-2406 for the Customer Service Department.

Iron Horse Air Compressor part breakdown - IHTT90G

Item	Description	IHTT90G
1	Compressor w/ Flywheel	CC3065
2	Discharge Tube w/ Fittings	TU-25-AL
3	Pressure Gauge	PG200-2.5SI1/4
4	Air Receiver	10TT41X5-IH
5	Drain Cock	DC1/4
6	V-Belt	A54
7	Belt Guard	TT-GUARD
8	Engine - Robin	EX270-0442T
9	Pilot Unloader w/ Check Valve	LMV100F
10	Pulley - Engine	MA38X1
11	Safety Valve	PSV1/4-150
12	Engine Control w/ Cable	TCP-48
13	Handle Grip	TT-GRIP
14	Vibration Damper	TT-FOOT
15	Pneumatic Wheel	TT-WHEEL
	Axle	WA1001
16	Ball Valve	BV1/4MF


IRON HORSE

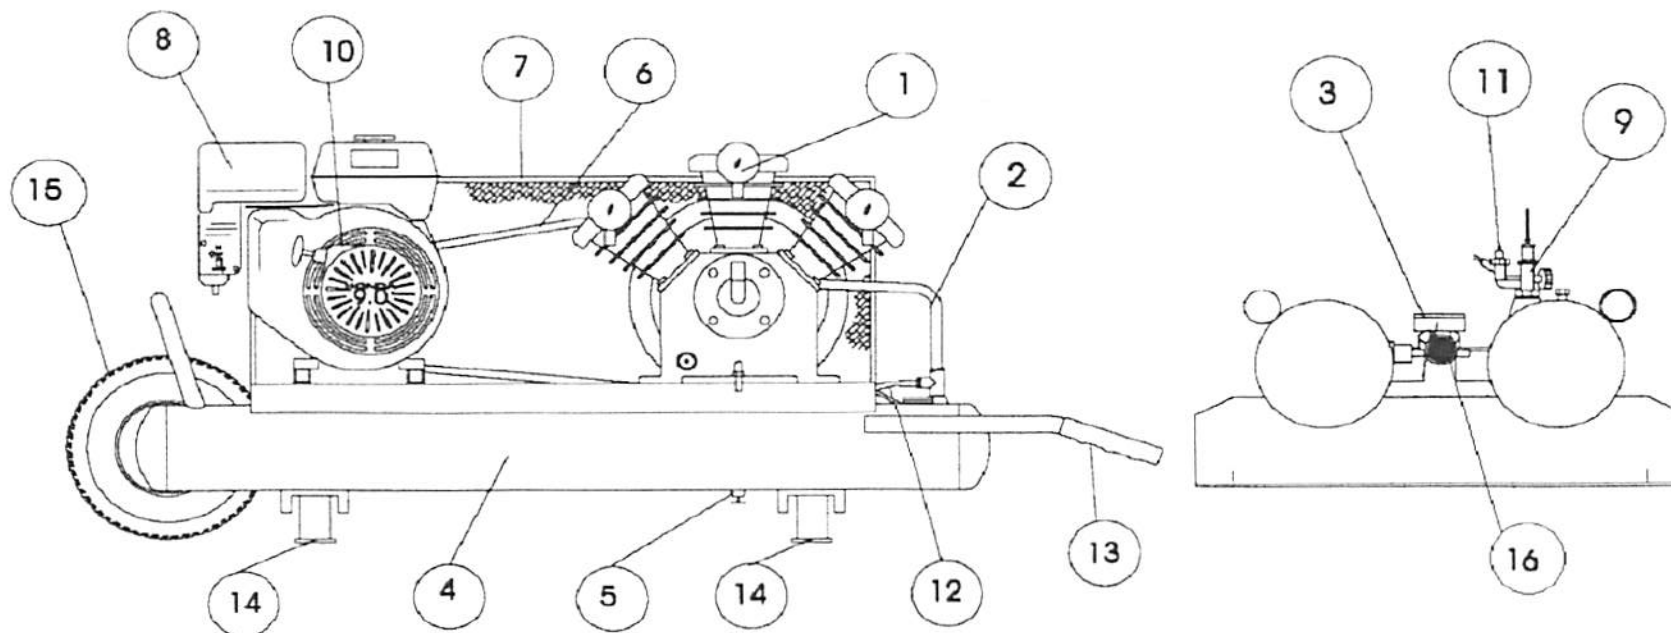

IHTT90G

Call 1-800-551-2406 for the Customer Service Department.

Item	Description	Qty	Part #
1	Bolt for cylinder head	8	TB-30-01
2	Washer for head bolt	8	TB-30-02
3	Cylinder head	2	TB-30-03
4	Air filter	2	TB-30-04
5	Washer for air filter	4	TB-30-05
6	Bolt for air filter	4	TB-30-06
7	Head gasket	2	TB-30-07
8	Valve seat	4	TB-30-08
9	Aluminum gasket	2	TB-30-09
10	Valve plate	4	TB-30-10
11	Valve seat - cylinder gskt	2	TB-30-11
12	Cylinder	2	TB-30-12
13	Cylinder to crankcase nut	8	TB-30-13
14	Cylinder - crank washer	8	TB-30-14
15	Cylinder - crank screw	8	TB-30-15
16	Cylinder - crank gasket	2	TB-30-16
17	Compression rings	4	TB-30-17
18	Firing kit (TB-30-17/19)	2	TB-30-18
19	Oil control ring	2	TB-30-19
20	Piston	2	TB-30-20
21	Piston pin	2	TB-30-21
22	Piston pin clip	2	TB-30-22
23	Connecting rod	2	TB-30-23
24	Oil splasher	2	TB-30-24
25	Oil splasher	2	TB-30-25
26	3-way connector pipe	2	TB-30-26
27	Exhaust pipe nut	1	TB-30-27
28	Elbow connector pipe	1	TB-30-28
29	Intercooler tube	1	TB-30-29
30	Bearing cover bolt	1	TB-30-33
31	Bearing cover washer	4	TB-30-34
32	Rear bearing cover	4	TB-30-35
33	Oil sight glass gasket	1	TB-30-36
34	Oil sight glass	1	TB-30-37
35	Drain cock	1	TB-30-38
36	Rear bearing cover gskt	1	TB-30-39
37	Oil cap seal	1	TB-30-40
38	Oil filler cap	1	TB-30-41
39	Crankcase	1	TB-30-42
40	Rear bearing	1	TB-40-42
41	Crankshaft	1	TB-30-44
42	Front bearing	1	TB-30-43
43	Crankshaft oil seal	1	TB-30-46
44	Front bearing cover gskt	1	TB-30-47
45	Front shaft cover	1	TB-30-48
46	Crankcase breather	1	TB-30-49
47	Front cover washer	4	TB-30-50
48	Front cover bolt	4	TB-30-06
49	Flywheel c/w fasteners	1	TB-30-52
50	Flywheel washer	1	TB-30-53
51	Flywheel copper washer	1	TB-30-50
52	Flywheel bolt	1	TB-30-55
53	Air filter element (CC2065)	2	TB-10-43

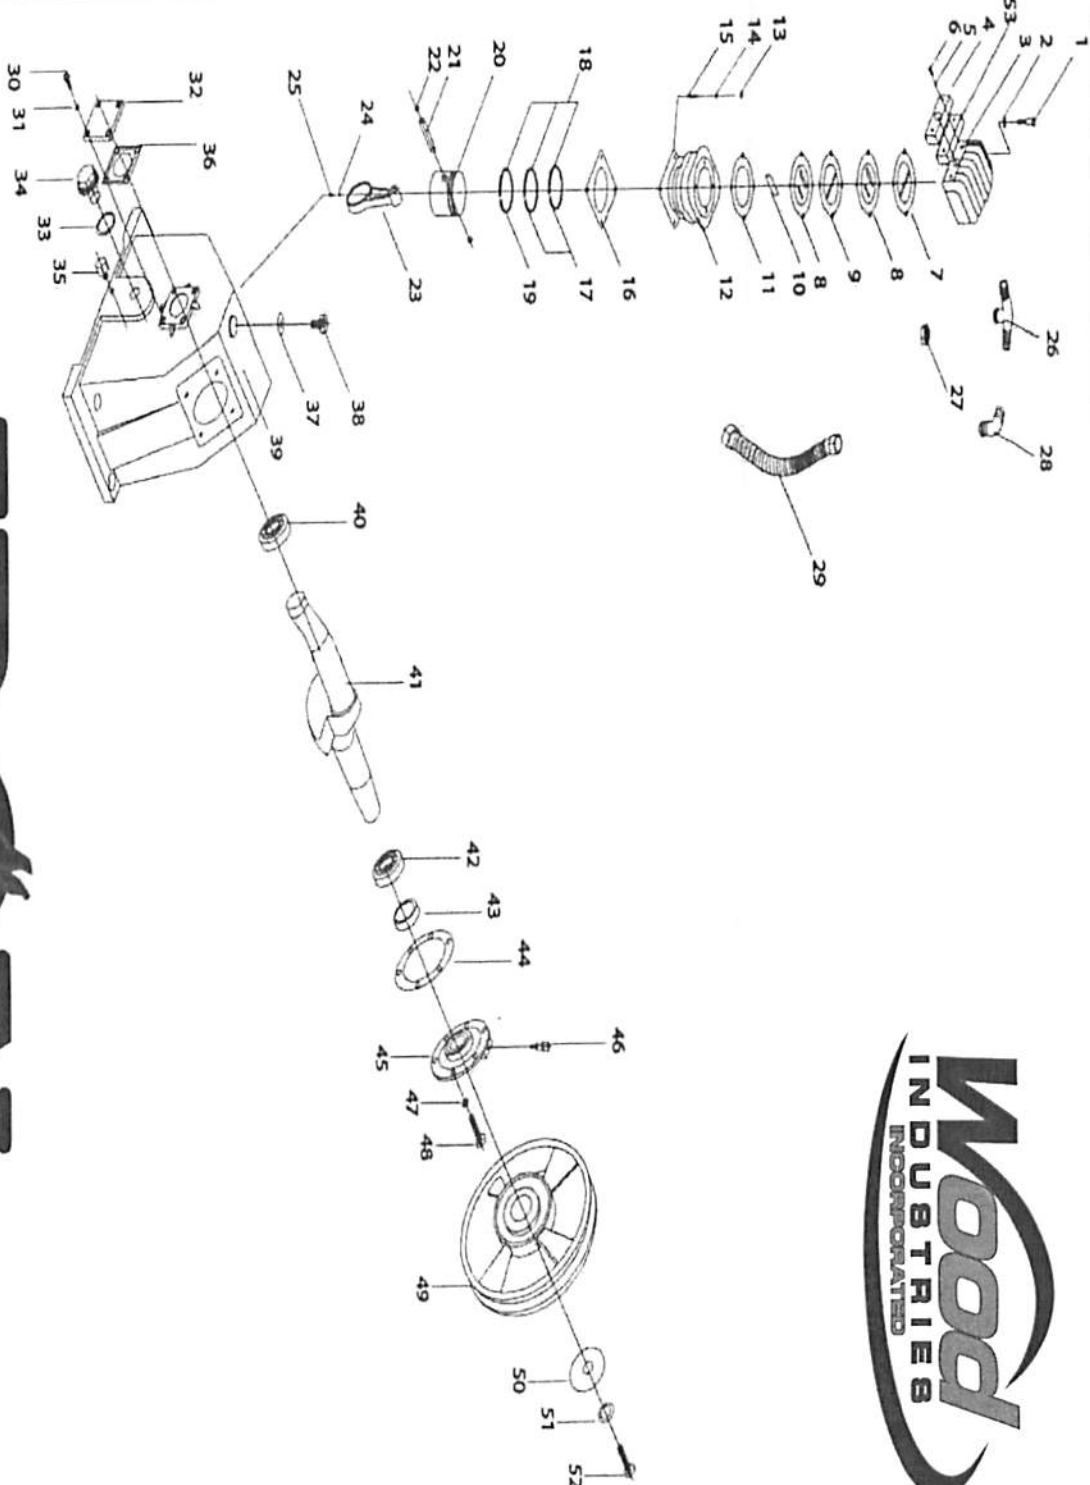

IRON HORSE

1-800-551-2406

CC2065