



HIGH VELOCITY OSCILLATING
PEDESTAL FAN

OWNER'S MANUAL



| | |
|--------------|-------|
| MODEL | |
| FE8-50S3dO | 10203 |

21.12

READ AND SAVE THESE INSTRUCTIONS

CAUTION: Read and follow all instructions before operating fan. Do not use fan if any part are damaged or missing.

WARNING: - To reduce the risk of fire or electrical shock, do not expose to water or rain.

- To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device.
- Automatically operated device - To reduce the risk of injury, disconnect from power supply before servicing.
- If the power supply cord is damaged, contact your local service centre or a qualified electrician to install an appropriate replacement cord to prevent any injury or damage.
- The appliance does not apply to be used in locations where special conditions prevail, such as the presence of a corrosive or explosive atmosphere (dust, vapour or gas).
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

RULES FOR SAFE OPERATION:

1. Never insert fingers or any other objects through the grill guard when fan is in operation.
2. Disconnect the fan from its power source when moving from one location to another.
3. Disconnect the fan from its power source when removing guards for cleaning.
4. Be sure fan is on a stable, flat surface when in operation.
5. Do not use fan in windows. Rain and moisture may create electrical hazard.
6. Close supervision is necessary when this fan is used near children, the elderly and pets.
7. Do not place the fan near an open flame, cooking or heating appliance, or hot surface.
8. This fan should not be operated outside.

CAUTION: Do not alter the fan's assembly.


Put a little lubricate oil into bearing room on the motor shell (Once after 3 months of 24 hour use or 6 months of regular use).

WARNING: Be sure that both front and rear guard screws are completely tightened in locking position before operation.

ASSEMBLY INSTRUCTIONS

● COLUMN / BASE ASSEMBLY INSTRUCTIONS:

1. Attach COUPLING to the BASE with the 4 screws as shown.
 2. Loosen set knob on coupling and extend inner tube to desired height.
 3. Slide COVER RING down the OUTER TUBE to rest on top of the BASE.
- CAUTION:** The set knob must be fully tightened before assembling the fan head to the inner tube.

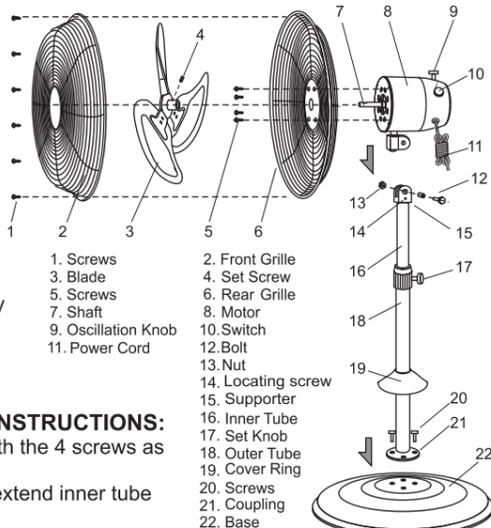

● MOTOR / COLUMN ASSEMBLY INSTRUCTIONS:

1. Set the MOTOR in the hole of the SUPPORTER. Inset the BOLT, WASHER and NUT, then firmly fasten the NUT to lock in place.
2. Inset and fasten the locating screw at the SUPPORTER.

● GRILLE / MOTOR ASSEMBLY INSTRUCTIONS:

1. Set the REAR GRILLE in its proper position. Please make sure the REAR GRILLE fits securely against the motor housing.
 2. Attach the REAR GRILLE by inserting and tightening the screws to the motor.
 3. Inset the BLADE on the motor shaft until it reaches a stopping point and the set screw is in line with the flat groove on the motor shaft.
- NOTE:** Be sure the set screw of the blade is facing the motor of the fan.
4. Securely tighten the BLADE set screw.
 5. Center the FRONT GRILLE by aligning the logo on the logo plate so it is horizontal and parallel with the floor.
 6. Combined the FRONT GRILLE with REAR GRILLE by fastening screws.
 7. Completely tighten grille screw on FRONT GRILLE and into REAR GRILLE.

OPERATING INSTRUCTIONS

● TO ADJUST AIRFLOW UPWARD OR DOWNWARD:

Tilt fan head to the desired angle loosen the LOCATING SCREW first and then loosen the NUT of the SUPPORTER, Tilt fan head to the desired angle then firmly tighten the LOCATING SCREW first and then tighten NUT of the SUPPORTER.

● TO MAKE THE FAN OSCILLATE: Press the knob at the top of the fan head.

● TO STOP THE FAN OSCILLATE: Pull the knob at the top of the fan head.

● SPEED CONTROL: Rotate the SWITCH to 0, 1, 2 and 3 designates OFF, LOW, MEDIUM and HIGH speeds respectively.

CLEANING

- WARNING:** Unplug from electrical supply source before cleaning.
1. Use soft damp cloth to clean machine, then wipe with dry cloth.
 2. Do not use a cleaning solution that is harmful to paints or plastics.
 3. Do not bend the blades.

IMPORTANT: surges in electrical power or excessive heat may cause the fan to turn off. Wait approximately 15 minutes for the fan to resume operation.

RATING:

10203: 120V~ 60Hz 165W 1.65A

For Questions and Assistance, please contact us at:
817-230-4114