

## RONGWANG GEARBOX OWNER'S MANUAL

Thanks for choosing our products. For your safety and safety of others, please read this owner's manual . IF you have any questions regarding our products, please contact us.

1. Before operation, check the gearbox for proper lubricant level. If low, fill to proper level with SAE80-90 weight gear lubricant. The check lubricant level, remove plug from rear of gearbox. Lubricant should be at the same level as the plug. Don't overfill ,as too much lubricant may rupture gearbox seal.
2. Remove the snap ring from input shaft on gearbox, attach pto shaft and install shear bolt. Be sure to replace the snap ring to gearbox input shaft. The snap ring will hold the pto shaft in place if the shear bolt is sheared. If input shaft type is smooth without snap ring, please attach pto shaft directly by shear bolt.
3. If the input shaft type is spline ,please attach pto shaft directly and make sure the bolt or spring of pto shaft has locked tightness input shaft of gearbox.
4. Make sure the gearbox has locked tightness on the deck.
5. Check all nuts and bolts for proper tightness. We recommend you check them after 4-6 hours of operation.
6. Tighten the castle nut holding the stump jumper or bar carrier to the lower end of the gearbox after 8 hours of operation.
7. Check every 8 hour for proper lubrication level.
8. Check lower seal for leaks every 8 hours.
9. Gearbox power shaft should be inspected every 8 hours/daily for foreign material wrapped about shaft. Remove foreign material if necessary.
10. Never place hands,feet or other object touch gearbox if in status of working .When inspecting or making repair ,must be sure the power in status of shut down.