


ASSEMBLY INSTRUCTIONS

Powder Coated Dog Kennel- 10ft x 10ft x 6ft

Thank you for purchasing this product

Attach Latch on tube and adjust to desired height then tighten nut.


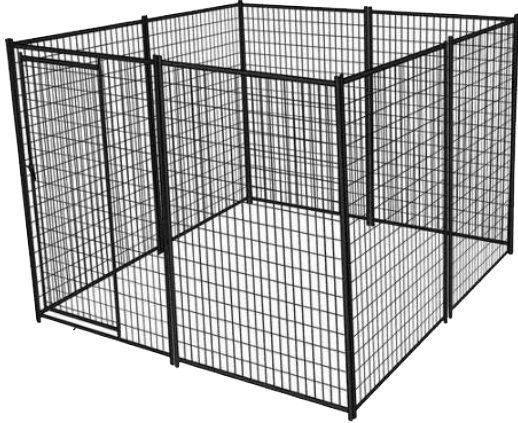


Gate Latch



Part	Description	Quantity
A	Gate Panel	1
B	Side Panel	7
C	Panel Clamps	16
D	Gate Latch	1

Panel Clamp

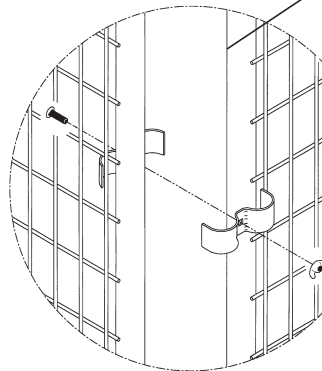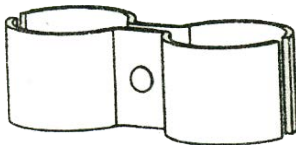

Attach panels, one side of the clamp will have to be inserted between the wire and the vertical tube before the other side of the clamp can be attached. One clamp should be attached at the top and one at the bottom of each panel.

PREPARATION

Before beginning assembly of this product, make sure all parts are present. Go through and compare parts with the package contents list above. Make sure all parts are included and not damaged before assembling product.

Estimated Assembly Time: 1 hour

Two people required for assembly.

Tools Required (not included): Wrench or socket wrench